

HOW TO WASH / धुलाई का तरीका

4 Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level.
5 Press Power SW
6 Select the wash selector to "GENTLE", "NORMAL", "STRONG" according to kinds and quantity of the laundry.

HOW TO RINSE / खंगालने (रिन्स) का तरीका

Interim spin rinse / थोड़ा स्पिन रिन्स (रिन्स से थोड़ा खंगालना)
1 After washing
2 Set the water selector to "SPIN".
3 Allow the water to flow appropriately.

Economical water supply rinse / खंगालने (रिन्स) में पानी की बचत

1 Set the drain selector to "WASH"
2 Set the rinse time with the wash timer.
3 Put the laundry into the spin dryer basket and set the spin time with the spin timer.

HOW TO RINSE / खंगालने (रिन्स) का तरीका

Continuous water supply rinse / चहते पानी में कपड़े खंगालना (रिन्स)
1 Set the drain selector to "WASH"
2 Put the laundry into the wash tub and open the water faucet.
3 Set the rinse time with the wash timer and feed water continuously.

HOW TO SPIN / निचोड़ने का तरीका

1. Put the laundry evenly into the spin dryer basket.
2. Put the laundry down lightly.
3. Place the safety cover horizontally on the top of the laundry.

SPIN TIME GUIDE / समय तालिका

Table with 2 columns: Type of clothing / कपड़े किस हैं, Spin Time / समय

- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.
If the spinning fall to stop when the spin dryer cover is opened, the brake is out of order.

CAUTION: For woolen clothes, spin for 1 min. only for clothes protection.

AFTER FINISHING WASH / धुलाई पूरी होने के बाद

1. Remove the laundry from the spin dryer basket and close the spin dryer cover / कपड़े को स्पिन ड्रम बास्केट से निकालें और स्पिन ड्रम को बंद कर दें।

REFERENCE / संदर्भ

TABLE 1. WEIGHT GUIDE FOR CLOTHES / कपड़ों के वजन के निर्देश
TABLE 2. GUIDE FOR WASHING / धुलाई के निर्देश

TABLE 2. GUIDE FOR WASHING (WITHOUT SOAK) / धुलाई के निर्देश (सोक के बिना)

TABLE 3. GUIDE FOR WASHING (WITH SOAK) / धुलाई के निर्देश (सोक के साथ)

TABLE 4. GUIDE FOR WASHING (WITH SOAK) / धुलाई के निर्देश (सोक के साथ)

Notes / टिप्पणी:
Amount of laundry is a weight of dry laundry / कपड़ों की मात्रा कर अर्थ सूखे कपड़ों के वजन से है।
Detergent is a general synthetic detergent / डिटरजेंट कोई भी सामान्य सिन्थेटिक डिटरजेंट हो सकता है।

CARE AND MAINTENANCE / देखभाल और सफाई

Washing machine / वाशिंग मशीन
Pulsator / पल्सेटर
Overflow filter & Rotation filter-C / ओवर फ्लो फिल्टर व रोटेशन फिल्टर-सी

CARE AND MAINTENANCE / देखभाल और सफाई

Spin dryer basket / स्पिन ड्रम बास्केट
TROUBLESHOOTING GUIDE / गड़बड़ी का पता लगाना

SPECIFICATIONS / माप

WP-9220\* / WP-90050\* / WP-9224
WP-9521 / WP-9526S
WP-1020 / WP-1021S / WP-1022M
WP-9852 / WP-1262S


Installation Check sheet

Customer Copy
Signature Of Customer
Date
Time
Company Copy
Model No.
Job No.
Dt. of pur.:



Owner's Manual
Please read this manual carefully and thoroughly before operating this unit.

MODEL : WP-9220/WP-90050
WP-9224
WP-9521/WP-9526S
WP-1020/WP-1021S
WP-1022M
WP-9852/WP-1262S

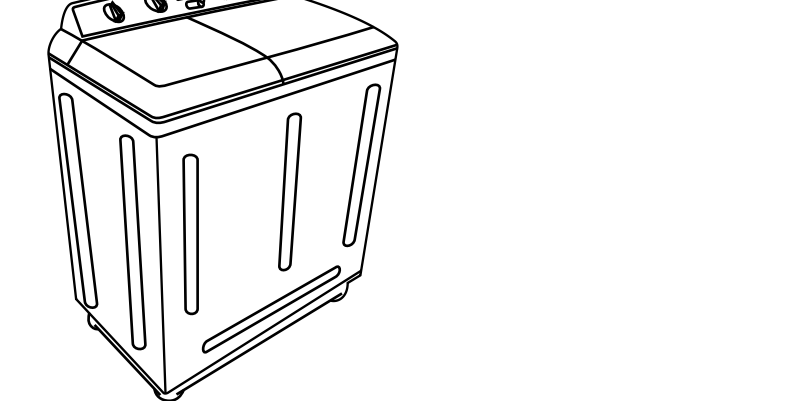

CUSTOMER SERVICE
CALL
CLICK
1800-180-9999
www.lgindia.com

WARRANTY

This LG Washing Machine comes with 2 year warranty, from the date of purchase, that comprises of a 2 year warranty on all Parts except Lint filter, knobs, Inlet/outlet hose & Top Covers, subject to that the warranty card bears the rubber stamp, date and signature of our Authorized Dealer.
WARRANTY IS NOT APPLICABLE IN THE FOLLOWING CASES:

